



HOW TO APPLY WAILPAPER BORDS



wallpaper

01 STEP 1



PREPARING THE SPACE


Use a damp cloth to wet and clean the surface. After the entire surface has been cleansed, dry the moisture with a clean dry cloth, and allow your wall to completely dry. Then, move on to the start of your wallpaper border application.

Many clients have successfully placed our wallpapers on textured walls, however, please be aware that our wallpaper borders are recommended for smooth walls and surfaces.

USE A LEVEL TO DRAW A STRAIGHT LINE

Place the level in the corner of the wall, just below the height you want the top edge of the border to sit at. When the bubble in the level is centered, lightly draw a line with pencil along the top edge of the level.

02 STEP 2

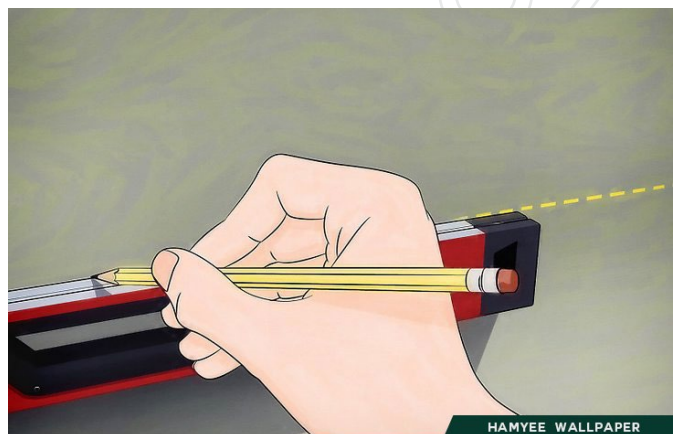

APPLYING YOUR MATERIAL

Gradually apply the strip of wallpaper to the wall. Press it down as flat against the wall as possible as you move along the length of the wall, but do not press it so hard that you stretch the paper. Make sure that the top edge of the border stays parallel with your guiding line, as well.



Don't worry about getting the application right the first time. Your newly acquired wallpaper border is completely removable and can be re-positioned.

Should you find any bubbles, you can use a squeegee for additional smoothness or simply peel and re-stick your wallpaper border.

TRIMMING

Using your sharp blade and ruler, trim the excess wallpaper border from the right or left of the wall. Be sure to use a sharp utility knife or cutting blades to ensure a proper cut, instead of tearing.

That's it! You're done. Now it's time to relax and enjoy your piece of art.

Still, have questions? No problem. Feel free to contact us at info@hamyee wallpaper.com or WhatsApp us FREE at +8618528047570.

04 STEP 4

